

06 - Printing Test & Configuration pages

Written By: Eric Sutter



INTRODUCTION

This guide will show you how to print the test and configuration pages you can use to check that your printer is correctly set up.

Step 1 — Open the Printer Driver

٩	Printers & scanners Add printers & scanners + Add a printer or scanner by	P	Printers & scanners Add printers & scanners If you can try unit	at ya get	 ← Settings
& other devices	Opt	vices	+ Add a printer or scanner troublesh Open trou	iter. lest	Printer status: Idle
scanners	Bar Code Printer PR40 Print	The state of the s	Printers & scanners Related se Bar Code Printer PR40 Print serve	ing	Print a test page
	Fax HP Laser/et 4350 PCL6 Class Driver Hel		Run the tr	able	Printer properties
idows Ink	Cha Offline Cha Microsoft Print to PDF Dow		Fax Help from Changing	he v	Printing preterences Hardware properties
	Scale Microsoft XPS Document Writer		HP LaserJet 4350 PCL6 Class Driver Download Offline Scanning Microsoft Print to PDF	ig p ocui	

- Open the "Printers & Scanners" menu.
- Click on the printer.
- Select the "Manage" option.
- Select "Printer Properties."

Step 2 — Print Test Page from the Driver

Bur Code Pinter PR40 Properties Code Pinter PR40 Properties Code Pinter Pinter Pinter Pinter Diver Diver	Bar Code Printer PR40 Properties Code Management Security Print Print	TEST
OK Cancel Apply Heb	OK Canod Autor Majo	

- Select the "Tools" tab at the top.
- Click "Print," and from the drop-down menu, select "Generic Test."
- This should print a test label, which should look like the example image.
 - If no page printed, check that the roll of labels is loaded correctly, and that the correct printing options are selected.

Step 3 — Open the Wireless Utility



- Open the GSS Wireless Setup Utility software used previously.
 - You can download it again <u>here</u>, if needed.
- Check the box for this printer.
- Hit the "Printer Function" button.
- Choose the option to "Print Test Page."

Step 4 — Print Configuration Page

igement 2.15		Prin	nter Function	×		
Users		Alert	Calibrate	5	Setup	Manual Name
Printer Name	IP Address	Model N	Reset Printer	No	Mileage	Interface
GSS-IND-TST	10.121.80.81	MA240T	Factory Default	0026	0.0576	« ->
Barcode Printer	10.121.80.77	MH240	Print Test Page	90167	0.3349	 (-> (->)
	10.121.00.101	1140	Configuration Page			
			Ignore àl ITO BáS			
			Ignore ADTOLDAS			
			Exit Line Mode			
			Password Setup			
			Wi-Fi Default			
figuration	File Manager	Com	Dump Text	p	Printer	Function Bitmap I
	250					

- Choose the option "Configuration Page."
- The labels should look like the examples listed here.