

07 - Powering on and Checking Connections

Written By: Eric Sutter



Step 1 — Powering On

- Now that the labels are loaded into the printer, you may now turn on the printer
 - △ **DO NOT** turn the printer on without the labels being loaded first. See how to load Direct Thermal labels HERE and Thermal Transfer with Ribbon HERE.
 - Click HERE to go through guide 02 Connecting the Printer to see where to plug in the Power, USB-A, USB-B, and Ethernet if you have not already.
- Plug the power cable into the printer then the wall, if it is not already.
- Turn on the printer.

Step 2 — USB Connection

																				-00	07.097 negre:					-
	I				łs ⊕	Advanced About り合足点を	(5 (5 V) E (**	Group:	All	③ TSC Concole Printers Functions Tools Advanced About 글 같 20 경제 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1															
_			TE Vi	C Console U.59 il.exe					P	Interface	Model GSS-LABEL-P	Version B125EZD TC	Serial No. E MH221150326	Mileage (Km)	Batt. Capacit	y Batt. Life	Last		Status	Printer	Interface	Model	Version	Serial No.	Mileage (Kr	n) Batt. C
		Console s Fun Status 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9	ctions Tools ↓ ① ① ↓ ↓ Printer GSS 1.48EL P. GSS-PTR-MOB PS-810400 PS-810400 PS-6513E0 GSS MOBILE P. PS-810405 GSS-LABEL P.	Advanced About ♥ ① ① ① 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 10 12 0.00 0 10 12 0.00 0 10 12 0.00 0 10 12 0.00 0 10 12 0.00 0 10 12 0.00 0 10 12 10 0 10 12 10 0 10 12 10 10 12 10 10 12 10 10 12 10 10 12 10 10 12 10 10 10 12 10 10 12 10 12 10 12 10 12 10 12 10 10 12 10 12 10 12 10 12 10 12 10	Model CSS-LABEL-P Alpha-40L TX200 CSS-FTR-O-W CSS-FTR-O-W Alpha-40L TTP247 TX200 CSS-LABEL-P.	Version B1 25 EZD TCF B0.98.002 EZC. A2.12 EZD TCF A2.12 EZD TCF B0.98.002 EZC B.11 EZD A2.12 EZD TCF B1.25 EZD TCF	Serial No. MH221150326 A40L20450019 TX221050328 TX22105036 A40L20450012 T4518230403 TX221050038 MH221150326	Mileage (Km 0.0548 0.0198 0.1182 0.0024 0.0024 0.0024 0.0128 0.0104 0.0003 0.0441	08 08 E.P	↔ 10.121.80.95 ↔ 10.121.80.95 ↔ 10.121.80.83 ↔ 10.121.80.83 ↔ 10.121.80.83 ↔ USB ♥ USB ♥ USB ♥ USB ♥ USB	GSSCLABEL P Alpha-40L TX200 GSS-PTR-D-W. GSS-PTR-D-W. Mpha-40L MPha-40L TTP247 TX200 GSS-LABEL-P.	Add Printers Add Printers Add Printers Cont	LP244C COM1 LP11 OK	0.0203 0.11 2 V	34%	600D	1507/20 1507/20 1507/20 1507/20 27/07/20 11/07/20 21/07/20 30/06/20		Ŷ	GS-1.48EL-P GS-917R-MOB. PS-8104AF PS-810400 PS-6513E0 GSS MOBILE P. PS-FF0314 PS-810A65 GSS-1.48EL-P. Test Name	→ 10/1210 89 → 10/1218 95 → 10/1218 88 → 10/1218 88 ♥ USE 9 ♥ USE 9 ♥ USE 9 ♥ USE 9 ♥ USE 9	CSSI ABEL-P. Alpha-40L TX200 GSS-PTR-D-W. GSS-PTR-D-W. Alpha-40L TTP247 TX200 CSS-LABEL-P. _P244C	B1.25 EZD TOF B0.98.002 EZC A2.12 EZD A2.12 EZD TOF A2.12 EZD TOF B0.98.002 EZC 8.11 EZD A2.12 EZD TOF B1.25 EZD TOF B1.25 EZD TOF B1.25 EZD TOF B1.35 EZD TOF	MH221150326 A40L20450019 Tx221050028 Tx221050036 Tx221050036 A40L20450022 T4518230403 Tx221050033 MH221150328	0 0548 0.0203 0.1182 0.0024 0.0024 0.0128 0.0104 0.0104 0.0003 0.0441	34%

- To see which cables connect where on the printer, please refer to guide 02 Connecting the Printer, or click HERE.
- Now that the USB-B is connected and the Printer has power, you will be able to connect to the printer in the GSS Certified Printer Tool.
 - To download the GSS Certified Printer Tool, click <u>HERE</u>.
- Select "Add Printers" shown by the red box.
- Confirm that 'USB' is selected. The drop down next to it should read 'GSS-PTR-D-WIRELESS.' These are both shown by the orange box. Click 'OK'
 - (i) If the printer does not appear in the dropdown, click the "Refresh USB List" button shown by the green arrow. If it still does not appear, try turning off the printer, waiting a moment for it to fully power off, then powering it back on and repeating this step.
- Under status, a green bulb will appear for the printer when it is online, and it will turn grey when it turns offline.
- Under status, a green bulb will appear for the printer when it is online, and it will turn grey when it turns offline.

Step 3 — Ethernet Connection

- Now that the Ethernet is connected and the Printer has power, two LEDS will light up by the ethernet port.
- The amber light will stay solid while the green light will be blinking.