



STATUS LED

Summary of Notifications on the GSS-M3

Written By: Ian Savitch

2.4. NOTIFICATIONS

2.4.1. STATUS LED

Two LED indicators located above the touch screen provide information about charging status, scanner light beam, and scanner "Good Read" during data collection.



Indicator	Status	Description
Charging	Green, solid	Charging complete
	Red, solid	Charging the mobile computer
	Red, blinking	Charging error (for instance, battery not in place)
Backup battery power being used	Red, solid	Upon the removal of the main battery the red light is on for a while and then goes off to signal that the main battery is ready to be removed.



Indicator	Status	Description
Barcode or RFID tag decode	Green, flash once	Good read

 
Note: For Scanner decode and Scanner beam LED to function, LED notification must be enabled in Reader Configuration.

Step 1 — STATUS LED


2.4. NOTIFICATIONS

2.4.1. STATUS LED

Two LED indicators located above the touch screen provide information about charging status, scanner light beam, and scanner "Good Read" during data collection.



Indicator	Status	Description
Charging	Green, solid	Charging complete
	Red, solid	Charging the mobile computer
	Red, blinking	Charging error (for instance, battery not in place)
Backup battery power being used	Red, solid	Upon the removal of the main battery the red light is on for a while and then goes off to signal that the main battery is ready to be removed.

 

Indicator	Status	Description
Barcode or RFID tag decode	Green, flash once	Good read

Note: For Scanner decode and Scanner beam LED to function, LED notification must be enabled in Reader Configuration.

- Insert wisdom here.