



Lock Device

How to lock the GSS-M3


Written By: Ian Savitch

3.4.2. LOCK DEVICE


Setting a screen lock allows you to protect your personal data on this device while the device is not at your hand. With various types of screen lock available and Smart Lock, you can not only enjoy the benefits of this function but also great convenience.

LOCK RS31

Tap **All Apps** | **Settings** | **Security** | **Screen lock** to change the lock method.

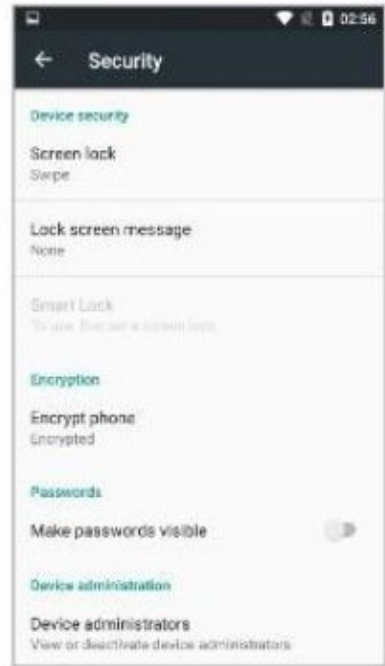

The screenshot shows the 'Security' settings page. It includes sections for 'Device security', 'Screen lock' (set to 'Swipe'), 'Lock screen message' (set to 'None'), 'Smart Lock', 'Encryption' (with 'Encrypt phone' set to 'Encrypted'), 'Passwords' (with 'Make passwords visible' toggle), and 'Device administration'.



The screenshot shows the 'Choose screen lock' menu with the following options and instructions:

- None → Disable screen lock
- Swipe → Default slide gesture
- Pattern → Enter a pattern to unlock
- Voice Unlock → Set a voice command to unlock
- PIN → Uses the PIN code to unlock
- Password → Enter a password of at least 4 characters to unlock.


Step 1 — Lock the Device

3.4.2. LOCK DEVICE

Setting a screen lock allows you to protect your personal data on this device while the device is not at your hand. With various types of screen lock available and Smart Lock, you can not only enjoy the benefits of this function but also great convenience.

LOCK RS31


Tap All Apps | Settings | Security | Screen lock to change the lock method.

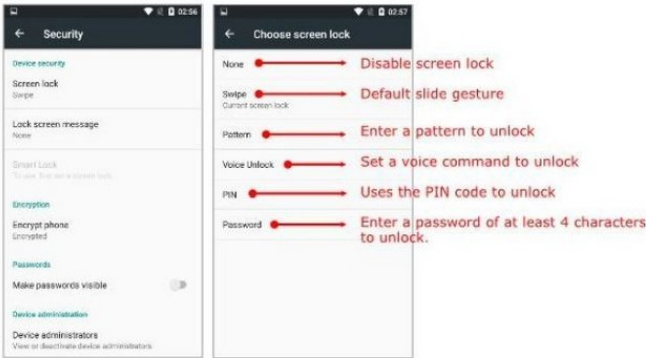

● Insert wisdom here.

Step 2 — Lock the Device - Con't.

By selecting a pattern, Voice Unlock, Pin or Password method, you can access advanced settings and **Smart Lock** to customize personal lock settings.

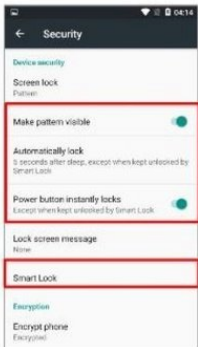

Warning:

To save battery power, suspend the mobile computer when not in use.

● Insert wisdom here.